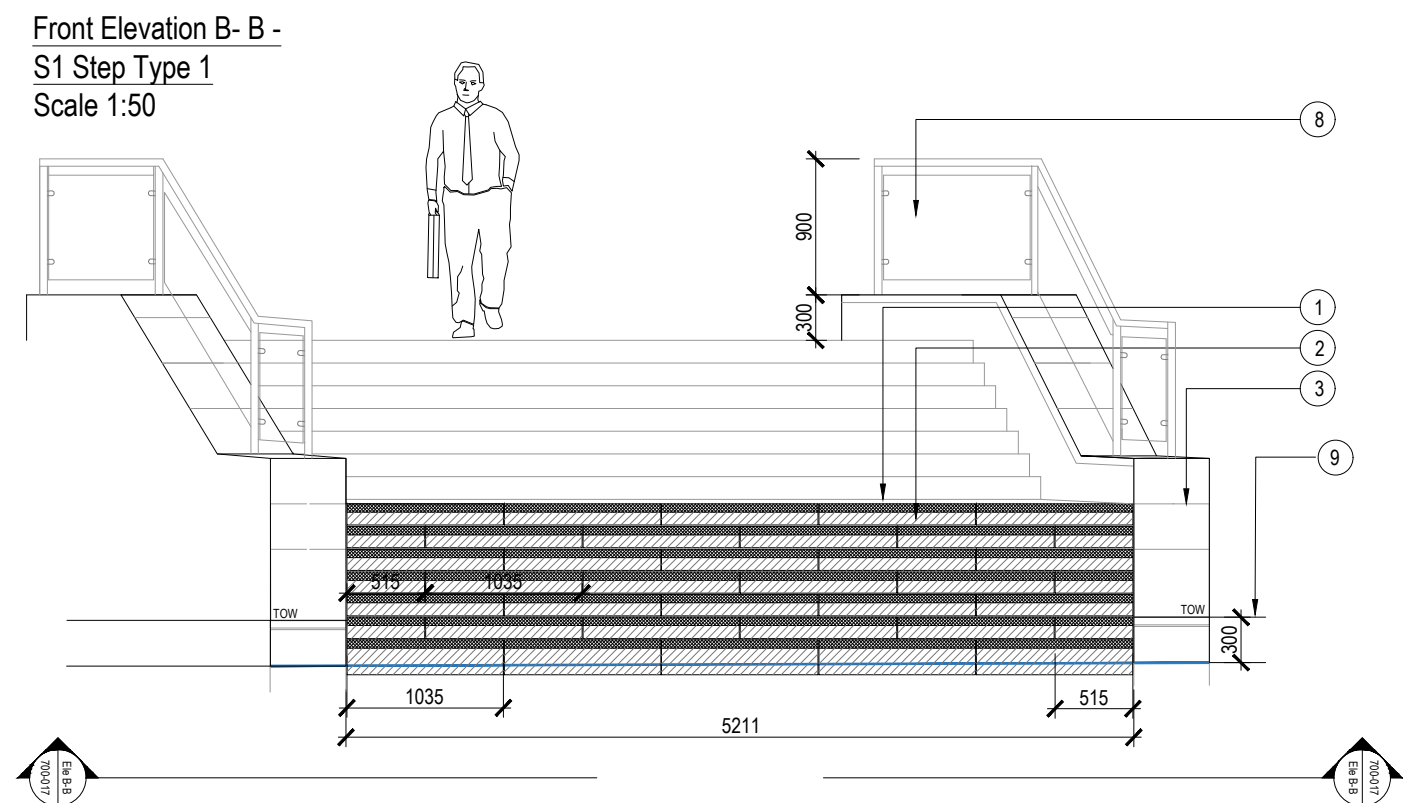


14 Where wall alignment changes at angles greater than 90 degrees, use 1/2" increments to form a neat edge.

Note: All structural elements refer to engineer's drawings and specifications.

	Intelligence Buildings Infrastructure		www.ibigroup.com
Project BARNSELY PUBLIC REALM			
<div style="border: 1px solid black; height: 200px; width: 100%;"></div>			
Drawing Title STEPS AND LOW WALL DETAIL			
Job Number 50035	Drawing Originated Date 11/10/18	PAS 1992 Status Code Pending	
Varies COMMENT AND APPROVAL			
Drawing Number BBTC_IBI_N1_L G700_DT_00_17			Revision G